

AEGIS 4000RT QUICK REFERENCE GUIDE

LOG INTO THE PROGRAMMING

- STEP 1** Press the 0 and # simultaneously, then release both keys.
STEP 2 Enter the 4-digit Master Code, you will hear **"ONE SHORT BEEP"**.
STEP 3 Select the function code from the table below.

FUNCTION CODES TABLE

CODE	DESCRIPTION	CODE	DESCRIPTION
*	Exit Programming Mode or hang-up	76	Delete all call forwarding on 70, 71 and 72
#	To accept program	87	Disable or Enable automatic call forwarding. 0= disabled 1= enabled
* and #	To reset the master code to factory default (0000).	88	Select automatic call forwarding function number 71 or 72.
00	Change unit master code	89	Select automatic call forwarding time or hang-up time (15-90 seconds)
01-20	Individual access code to access relay 1 (door 1)	90	Manual unlock or lock relay 1 (door 1) 1= to unlock 0= to lock
21-40	Individual access code to access relay 2 (door 2)	91	Manual unlock or lock relay 2 (door 2) 0= to lock 1= to unlock
41-50	Individual access code to access relay 1 and 2 (door 1 and door 2)	92	Talk time (10-90 seconds)
51	Relay 1 (door 1) Open Interval	93	Lock-out count (03-09)
52	Relay 2 (door 2) Open Interval	94	Auxiliary Mode 0= disabled 1= enabled control by door open interval 2= enable control by Auxin
60	Delete individual access code index 01-20	95	Alarm mode 0= local alarm 1= remote alarm
61	Delete individual access code index 21-40	96	System answer mode (0= disabled, 1,2,3,...9 = enable 1st, 2nd, 3rd,...., 9th rings)
60	Delete individual access code index 41-50	97	Do not disturb mode (0= disabled 1= enabled)
65	Delete all access codes index 01-50	98	Select initiating premise call key 0= # 1= *
70	Direct call forwarding	99	Set memory to factory default.
71-72	Automatic or manual call forwarding		

PARAMETER DEFAULT SETTINGS TABLE

00 (Master Code) = 0000	94 (Auxiliary mode) = 0 (disabled)	Alarm beep (system,s speaker) = 30 seconds
51 (Door 1 open interval) = 12 seconds	95 (Alarm mode) = 10 seconds (local) 30 seconds (remote)	Alarm call (premise) = 10 seconds
52 (Door 2 open interval) = 12 seconds		Alarm call (remote) = 60 seconds
87 (Automatic call forwarding) = disabled	96 System answer mode = 0 (disabled)	Unit blockout time = 60 seconds
89 (Automatic call forwarding time) = 15 sec.	97 Do not disturb mode = 0 (disabled)	Call waiting beeps = 3 times
92 (Talk time) = 60 seconds	98 Initiating premise call = ##	See Owners manual for more detail
93 (Lock-out count) = 3 tries	Visitor call (local) = 30 seconds ring	

SYSTEM OPERATIONS

- | <ol style="list-style-type: none"> 1. To place a call from the AeGIS 4000RT: Press #. 2. To grant access to a visitor: Press 9 (door 1) or Press 8 (door 2). 3. To use a personal access code: Press * then release, and press 4-digit access code. 4. To extend a talk time: tenant must press # after hearing the time-out warning beep. 5. To enable call forwarding:
 <u>Local</u> press 0 and * simultaneously then release then select 1(call forwarding on 71) or 2 (call forwarding on 72) then press #.
 <u>Premise phone</u> lift the handset wait for dial tone then press ## then select 1(call forwarding on 71) or 2 (call forwarding on 72) then press #.
 <u>Remote phone</u> lift the handset wait for dial tone then press # and 4-digit master code then select 1(call forwarding on 71) or 2 (call forwarding on 72) then press # | <ol style="list-style-type: none"> 6. To unlock cycle, unlock hold and lock door 1 and door 2: <table border="1" style="width: 100%; border-collapse: collapse; margin-top: 5px;"> <thead> <tr style="background-color: #cccccc;"> <th style="width: 33%;">LOCAL</th> <th style="width: 33%;">PREMISE PHONE</th> <th style="width: 33%;">REMOTE PHONE</th> </tr> </thead> <tbody> <tr> <td> <ul style="list-style-type: none"> • Press 0 and * simultaneously then release • Enter the 4-digit master code • To unlock, press 90 (door 1) or 91 (door 2), then # you will hear "one short beep" • Press 1 = unlock or 0 = lock, then press #. </td> <td> <ul style="list-style-type: none"> • Press ##, you will hear "One short beep". • Press For Door 1
9 to unlock cycle
8 to unlock hold
7 to lock • For Door 2
5 to unlock cycle
4 to unlock hold
3 to lock </td> <td> <ul style="list-style-type: none"> • Call the system, you will hear "One short beep". • Press # then the 4-digit master code. • Press For Door 1
9 to unlock cycle
8 to unlock hold
7 to lock • For Door 2
5 to unlock cycle
4 to unlock hold
3 to lock </td> </tr> </tbody> </table> | LOCAL | PREMISE PHONE | REMOTE PHONE | <ul style="list-style-type: none"> • Press 0 and * simultaneously then release • Enter the 4-digit master code • To unlock, press 90 (door 1) or 91 (door 2), then # you will hear "one short beep" • Press 1 = unlock or 0 = lock, then press #. | <ul style="list-style-type: none"> • Press ##, you will hear "One short beep". • Press For Door 1
9 to unlock cycle
8 to unlock hold
7 to lock • For Door 2
5 to unlock cycle
4 to unlock hold
3 to lock | <ul style="list-style-type: none"> • Call the system, you will hear "One short beep". • Press # then the 4-digit master code. • Press For Door 1
9 to unlock cycle
8 to unlock hold
7 to lock • For Door 2
5 to unlock cycle
4 to unlock hold
3 to lock |
|--|--|--|---------------|--------------|---|--|--|
| LOCAL | PREMISE PHONE | REMOTE PHONE | | | | | |
| <ul style="list-style-type: none"> • Press 0 and * simultaneously then release • Enter the 4-digit master code • To unlock, press 90 (door 1) or 91 (door 2), then # you will hear "one short beep" • Press 1 = unlock or 0 = lock, then press #. | <ul style="list-style-type: none"> • Press ##, you will hear "One short beep". • Press For Door 1
9 to unlock cycle
8 to unlock hold
7 to lock • For Door 2
5 to unlock cycle
4 to unlock hold
3 to lock | <ul style="list-style-type: none"> • Call the system, you will hear "One short beep". • Press # then the 4-digit master code. • Press For Door 1
9 to unlock cycle
8 to unlock hold
7 to lock • For Door 2
5 to unlock cycle
4 to unlock hold
3 to lock | | | | | |