


## Positive Gate Stop Installation Instructions for FAAC Model 760 In-Ground Operator

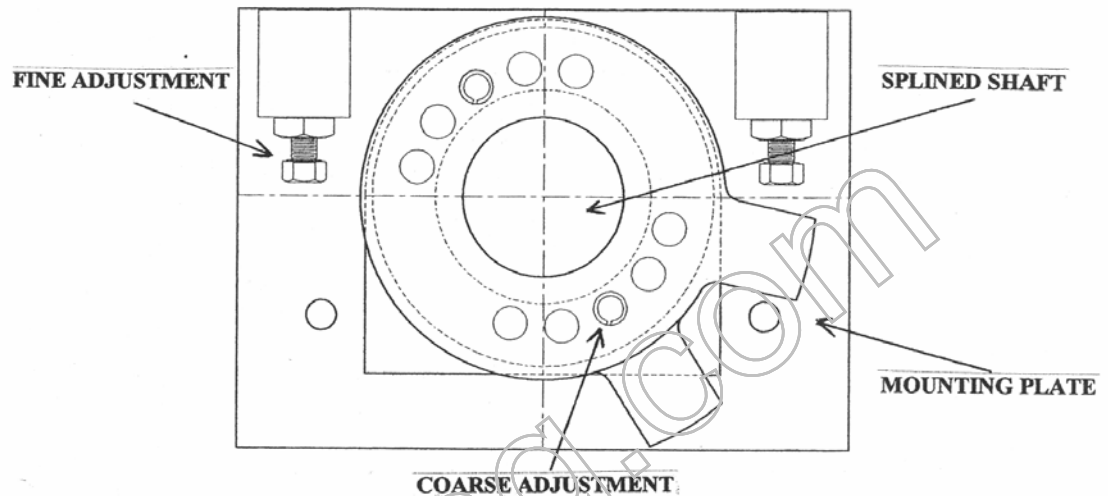

1. Gate stop to be installed prior to gate installation.
2. Install square mounting plate on operator (tight fit) with 2- M5 socket button head screws provided and tighten.
3. Adjustable stop was shipped for 90 degree operation but can be adjusted for additional degree opening by removing bottom plate and relocating to next hole.
4. Install adjustable stop on splined shaft with set screw collar facing up.
5. Install gate with splined coupling on to shaft.
6. With gate in the closed position and adjustable stop rotated to stop block, tighten set screws (1/8" Allen wrench) in coupling collar.
7. Test operation in open position.
8. Fine-tuning of stop can be done with cap screws (M6, use 10 MM wrench) and secure with lock nut when set.
9. When all adjustments have been made, install locking set screws in collar.
10. Note: set screws were used to allow slippage if abuse occurred to gate. If additional strength is required, tack weld collar to splined coupling.

### BRITT MANUFACTURING

Jim & Karin Brittell  
2824 Lynburke Rd.  
Lyndonville, VT 05851