



Instructions for 1601-154 Heater Kit

- Locate the mounting bolts in the gate operator and install the heater being sure to place the mounting plate between the operator housing and the heater. On slide gate operators, the heater is mounted vertically with the ON/OFF switch facing up.
- Connect the black and white wires to 115 VAC power source.
NOTE: The heater kit can only be powered from 115 VAC.
- Turn the power switch on. The heater automatically turns on when the temperature drops below 40°F (4.5°C) and turns off at 55°F (13°C).

