



# Tamper (0300A)

INTERRUPTOR DE SABOTAJE  
 AUTOPROTECTION  
 TAMPER  
 SABOTAGEKONTAKT  
 TAMPER  
 タンパ  
 防拆器  
 템퍼  
 ДАТЧИК ВСКРЫТИЯ

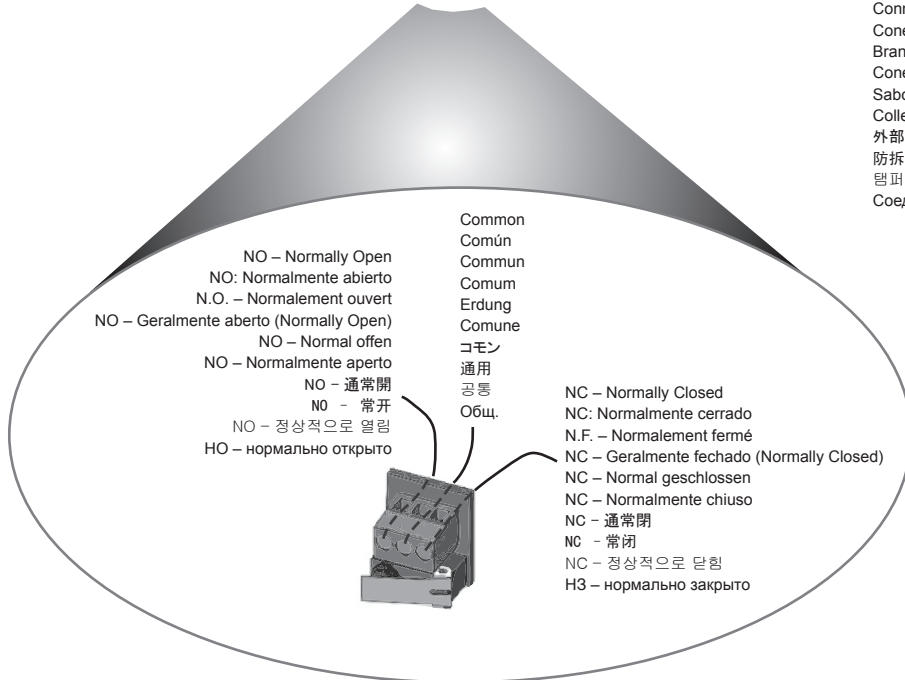

Connect Tamper to external system.  
 Conecte el interruptor de sabotaje al sistema externo.  
 Branchez l'autoprotection au système externe.  
 Conecte o tamper ao sistema externo.  
 Sabotagekontakt an externes System anschließen.  
 Collegare il contatto tamper al sistema esterno.  
 外部システムにタンパを接続します。  
 防拆器连接到外部系统。  
 템퍼를 외부 시스템에 연결。  
 Соединить датчик вскрытия с внешней системой.

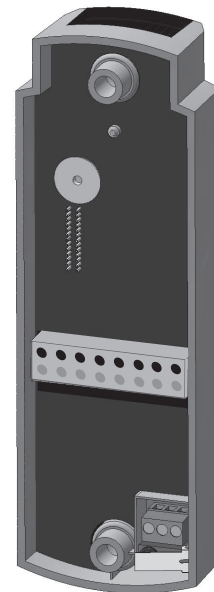

**ACCESS** experience.

[hidglobal.com](http://hidglobal.com)

© 2008 HID Global Corporation. All rights reserved.

800-0300-901 Rev A.0

#### North America

9292 Jeronimo Road  
Irvine, CA 92618-1905  
USA

Phone: 800 237 7769  
Support: 866-607-7339  
Fax: 949 598 1690  
Email: [tech@hidglobal.com](mailto:tech@hidglobal.com)

#### Asia Pacific

19/F 625 King's Road  
NorthPoint, Island East  
Hong Kong

Phone: 852 3160 9802  
Support: 852 3160 9833  
Fax: 852 3160 4809  
Email: [asiastupport@hidglobal.com](mailto:asiastupport@hidglobal.com)

#### Europe, Middle East & Africa

Phoenix Road  
Haverhill, Suffolk CB9 7AE  
England

Phone: +44 (0) 1440 714 850  
Support: +44 (0) 1440 711 822  
Fax: +44 (0) 1440 714 840  
Email: [eusupport@hidglobal.com](mailto:eusupport@hidglobal.com)

An ASSA ABLOY Group brand



**ASSA ABLOY**